

AIRCRAFT PARKING / DOCKING CHART-ICAO


13 41 09 N
100 44 56 E

APRON ELEV 4 FT

TWR FREQ 119.0 (RWY 19R/01L)
TWR FREQ 118.2 (RWY 19L/01R)

GND FREQ 121.95 (WEST APRON)
GND FREQ 121.75 (MAIN APRON , SAT-1 APRON)
GND FREQ 121.65 (EAST APRON)

BANGKOK / Suvarnabhumi Intl

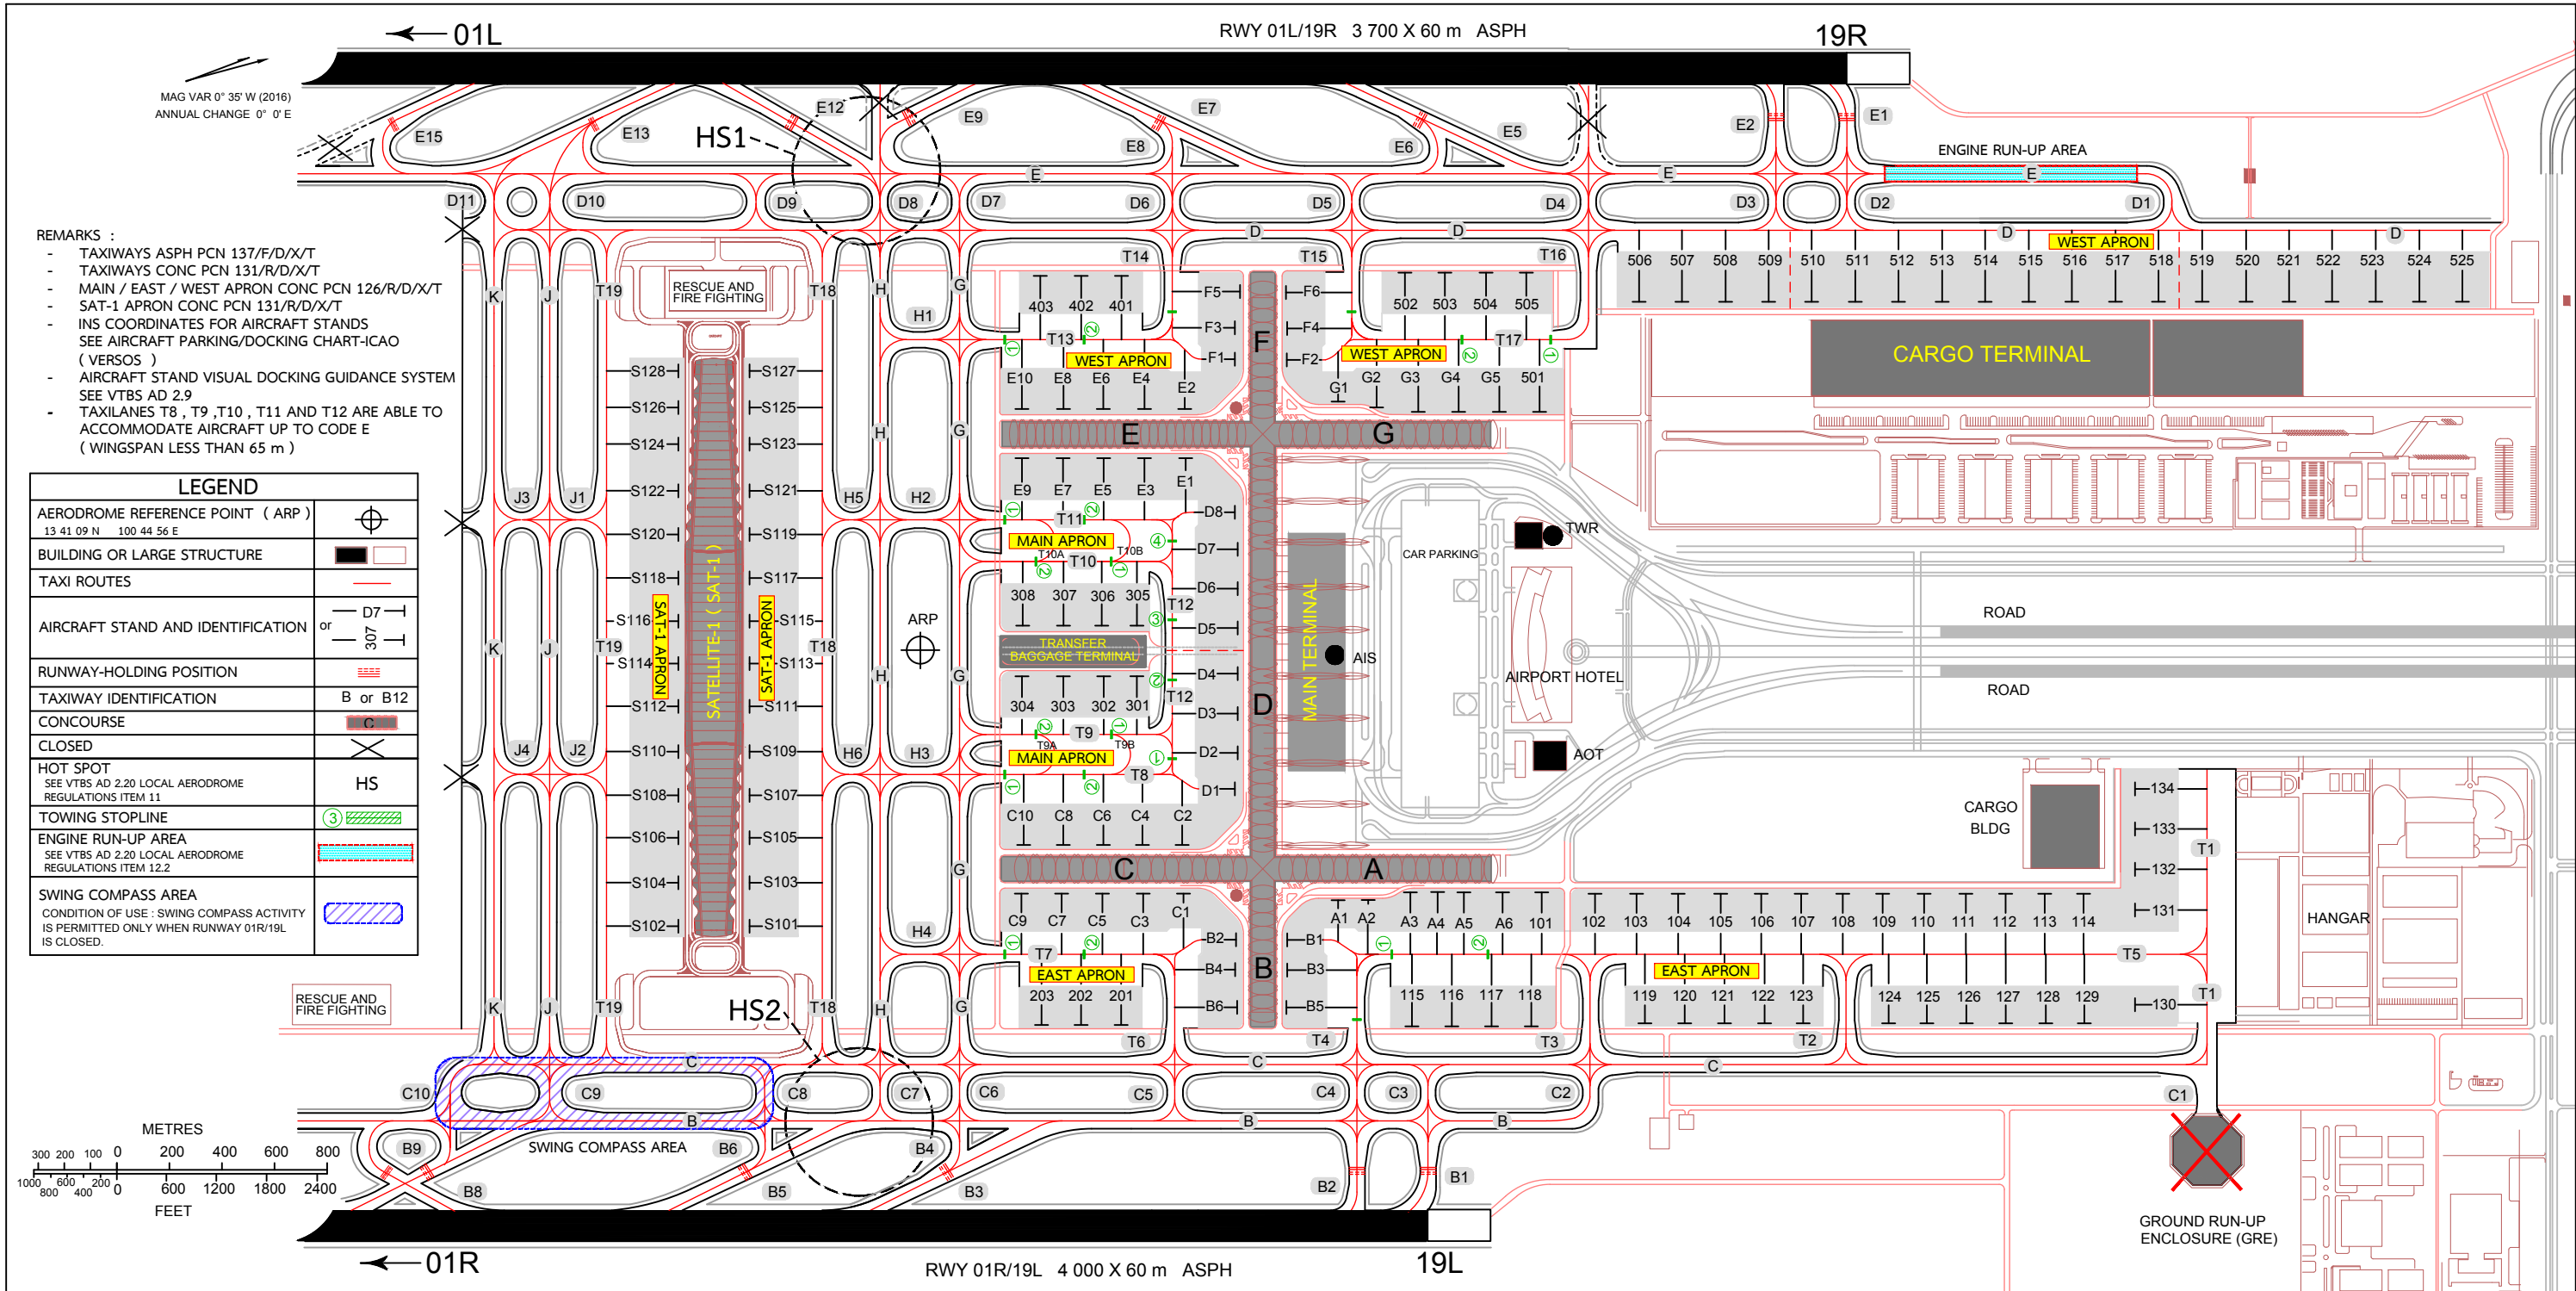

- REMARKS :
- TAXIWAYS ASPH PCN 137/F/D/X/T
 - TAXIWAYS CONC PCN 131/R/D/X/T
 - MAIN / EAST / WEST APRON CONC PCN 126/R/D/X/T
 - SAT-1 APRON CONC PCN 131/R/D/X/T
 - INS COORDINATES FOR AIRCRAFT STANDS SEE AIRCRAFT PARKING/DOCKING CHART-ICAO (VERSOS)
 - AIRCRAFT STAND VISUAL DOCKING GUIDANCE SYSTEM SEE VTBS AD 2.9
 - TAXILANES T8 , T9 , T10 , T11 AND T12 ARE ABLE TO ACCOMMODATE AIRCRAFT UP TO CODE E (WINGSPAN LESS THAN 65 m)

LEGEND	
AERODROME REFERENCE POINT (ARP) 13 41 09 N 100 44 56 E	
BUILDING OR LARGE STRUCTURE	
TAXI ROUTES	
AIRCRAFT STAND AND IDENTIFICATION	
RUNWAY-HOLDING POSITION	
TAXIWAY IDENTIFICATION	
CONCOURSE	
CLOSED	
HOT SPOT SEE VTBS AD 2.20 LOCAL AERODROME REGULATIONS ITEM 11	
TOWING STOPLINE	
ENGINE RUN-UP AREA SEE VTBS AD 2.20 LOCAL AERODROME REGULATIONS ITEM 12.2	
SWING COMPASS AREA CONDITION OF USE : SWING COMPASS ACTIVITY IS PERMITTED ONLY WHEN RUNWAY 01R/19L IS CLOSED.	

CHANGE : REVISED CHART