


STANDARD INSTRUMENT DEPARTURE RUNWAY 03


NAN ONE ALFA (NAN 1A)

Take off, climb runway heading until 2 500 FT or above, then turn right heading 190° to cross CTR R-060 not below 2 900 FT, to intercept and proceed on CTR R-143 not above 11 000 FT.

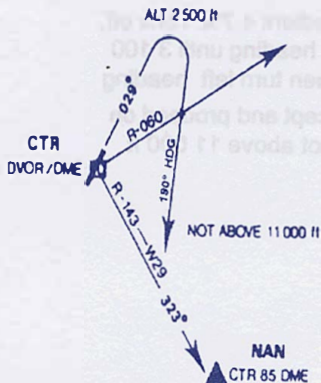

PHRAE ONE ALFA (PAE 1A)

Take off, climb runway heading until 2 500 FT or above, then turn right heading 200° to cross CTR R-060 not below 2 900 FT, to intercept and proceed on CTR R-172 not above 11 000 FT.

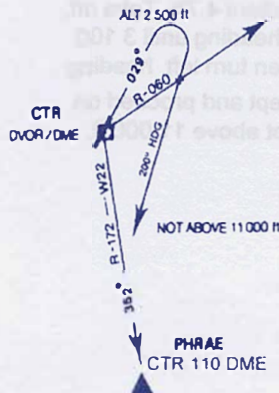

CHIANG MAI ONE ALFA (CMA 1A)

Take off, climb runway heading until 2 500 FT or above, then turn right heading 240° to cross CTR R-060 not below 2 900 FT, to intercept and proceed on CTR R-216 not above 11 000 FT.

